

# PRODUCT INSTALLATION GUIDE

Forend Pistol Grip



## HARDWARE INCLUDED

[1] 6-32 x 1 1/4" Phillips Head Machine Screw

[1] 6-32 Hex Nut  
[1] Washer

## TOOLS NEEDED

Flat Head Screwdriver

Phillips Head Screwdriver

Allen Set



**Warning:** When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. We are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.



1

Remove the screw, washer and nut from the pistol grip handle base. Slide the pistol grip onto the picatinny rail to the desired location as seen in Figure 1. Be sure the finger grooves of the pistol grip face forward.



4

To adjust the angle of the pistol grip, press the button on the left side of the pistol grip and rotate until it snaps into place as seen in Figure 4.



2

Insert the screw through the washer and into the round hole on the pistol grip as seen in Figure 2.



3

Thread the nut onto the screw and using a phillips head screwdriver tighten until snug as seen in Figure 3.

