

PRODUCT INSTALLATION GUIDE

AK-47 Strikforce TactLite Elite Mount Adjustable Stock



HARDWARE INCLUDED

- [1] 8 x 48-2 x 1/2" Plastite Pan Head Screw
- [1] 8-32 x 5/16" Button Head Cap Screw

NON APPLICABLE

TOOLS Needed

- 5/16" Drill Bit
- Phillips Head Screwdriver
- Allen Set



Warning: When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. We are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.



1

After disassembling your AK using your owners manual, begin by placing the elite mount into the receiver as seen in Figure 1.



4

Install the buffer tube into the rear of the mount as seen in Figure 4.




2

Next, use a paint pen to mark a circle onto the mount by placing the pen through the existing hole in the receiver as seen in Figure 2. Make sure the mount is held tight and flush to the receiver when making your mark.



5

Flip your AK over and using the provided 8-32 x 5/16" button head cap screw and a 3/32 allen wrench tighten the buffer tube to the mount as seen in Figure 5.

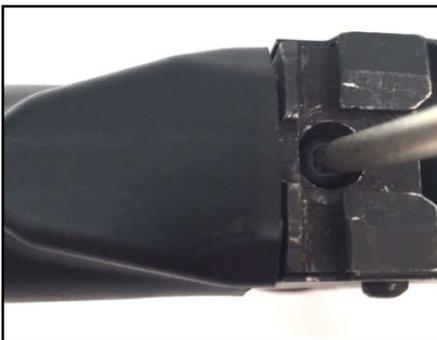

3

Before proceeding make sure you remove the mount from the receiver. Using a 5/16" drill bit, drill through the marked hole about 1/2". Place the mount into the receiver of the AK-47 and using the provided 8 x 48-2 x 1/2" plastite pan head torx screw tighten the mount to the receiver as seen in Figure 3.



