



PRODUCT


INSTALLATION GUIDE

Mossberg Halo Side Saddle

A.5.10.1630

Contents Included

- 1 Halo Side Saddle

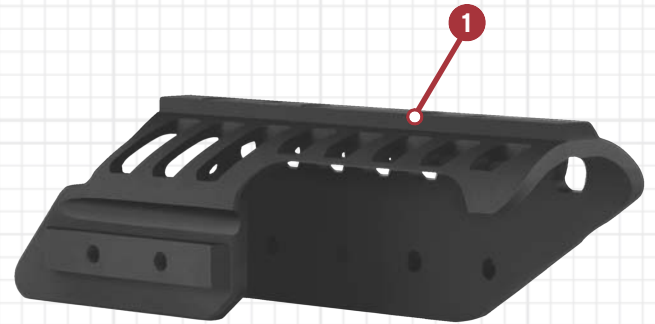


Installed on Firearm







Mossberg Halo Side Saddle

Hardware Included

-  [4] 8-40 x 3/8 Flat Head Socket Cap Screw


Tools Needed

-  Flat Head Screwdriver
-  Allen Set




Warning: When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. ATI is not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. ATI is not responsible for components that are damaged due to improper installation.

A Mossberg Side Saddle Installation

 Point the shotgun in a safe direction and place the saftey in the "on" position. Next, pull back the slide and carefully inspect the chambe to be sure the shotgun is unloaded.

1 Begin by removing the (4) 8-40 x 3/16" existing set screws from the top of the receiver using a small flat head screwdriver as seen in Figure 1.

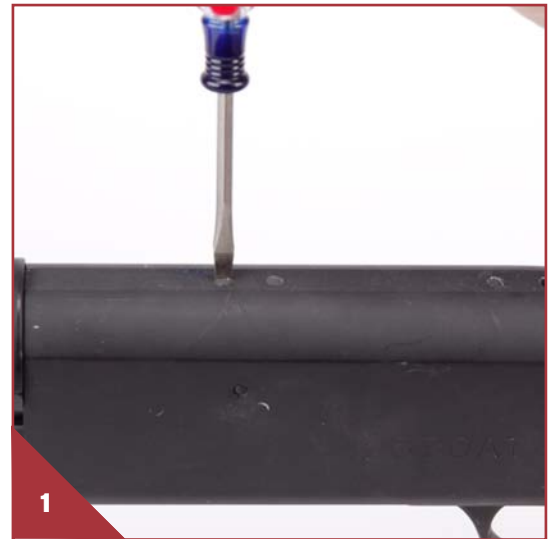



A

Mossberg Side Saddle -Continued

2

Next, mount the ATI Halo Side Saddle to the receiver as seen in Figure 2A and tighten using the (4) 8-40 x 3/8" flat head screws provided and a 3/32" allen wrench as seen in Figure 2B.

