

PRODUCT INSTALLATION GUIDE

Moss/Rem/Win 12 Gauge Strikeforce Six Position Adjustable Side Folding TactLite Shotgun Stock w/ Scorpion Recoil System



HARDWARE INCLUDED

- [1] 1/4 - 28 x 1 1/2" Machine Screw
- [1] 5/16-24 x 2" Machine Screw
- [1] 5/16 - 18 x 1" Machine Screw
- [1] 8-32 x 5/16 Machine Screw

- [1] M8 Flat Washer
- [5] 6-32 Hex Nut

TOOLS NEEDED


- Flat Head Screwdriver
- Phillips Head Screwdriver
- Allen Set




Warning: When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.



1 Begin by removing the existing recoil pad from your stock using a phillips head screwdriver. Next using a long flat head screwdriver or the appropriate socket with extension remove the stock bolt from the inside of the opening in the rear of the stock as seen in Figure 1.

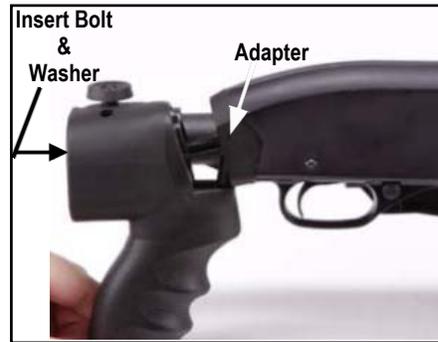

4 With the buttstock in the folded position, place the appropriate bolt with the supplied washer through the rear of the pivot housing and the appropriate adapter as seen in Figure 4.

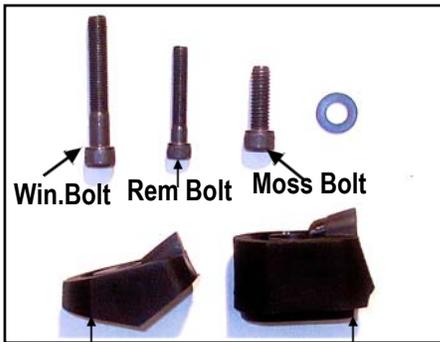

2 Select the correct adapter for your shotgun. The Mossberg and Maverick require no adapters. The Remington/Norinco and Winchester adapters are marked. Next, select the appropriate mounting bolt supplied for your shotgun as seen in Figure 2.



5 Using the appropriate allen wrench, secure the buttstock to the receiver by tightening the bolt as seen in Figure 5.



3 Next, put your stock into the folded position by pressing together on the pin cap and under the pivot housing as seen in Figure 3.



6 Take the buffer tube and turn over and install the provided 8-32 square nut into the buffer top hole tube as seen in Figure 6. NOTE: The screw in the step 8 will tighten into this square nut.

LIMITED LIFE TIME WARRANTY

MADE IN THE USA

LIMITED LIFE TIME WARRANTY

PRODUCT INSTALLATION GUIDE


Moss/Rem/Win 12 Gauge Strikeforce Six Position Adjustable Side Folding TactLite Shotgun Stock w/ Scorpion Recoil System

PAGE 2



7

With the stock in the folded position, slide the bufer tube into the pivot housing as seen in Figure 7.

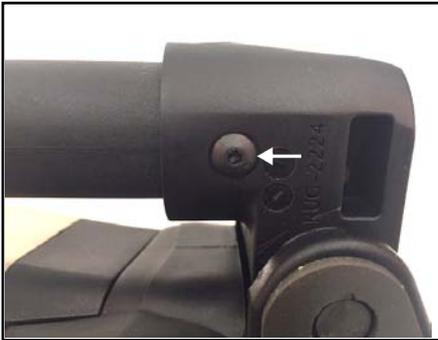

8

Next using the provided 8-32 x 3/4" socket cap screw, and a 3/32 allen wrench tighten the buffer tube to the buffer tube housing as seen in Figure 8.

NOTE: You will need to make sure the hole in the buffer tube lines up with the hole in the bottom of the buffer tube housing.



9

Install the pad on the bottom of the pivot housing as seen in figure 9.