

# PRODUCT INSTALLATION GUIDE

Moss/Rem/Win 12GA Shotforce Adjustable TactLite Shotgun Stock with Scorpion Recoil Pad



## HARDWARE INCLUDED

- [1] 1/4 - 28 x 1 1/4" Socket Head Cap Screw
- [1] M8 - 1.25 x 50 Socket Head Cap Screw
- [1] 5/16 - 18 x 1" Machine Screw
- [1] 8-32 x 3/4" Flat Head Socket Cap Allen Screw
- [1] #12 Flat Washer
- [1] 8-32 Square Nut

## TOOLS NEEDED

- Torx Driver
- Phillips Head Screwdriver
- Allen Set



**Warning:** When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.




**1** Begin by removing the existing recoil pad from your stock using a phillips head screwdriver. Next using a long flat head screwdriver or the appropriate socket with extension remove the stock bolt from the inside of the opening in the rear of the stock as seen in Figure 1.



**4** Take the buffer tube and turn over and install the provided 8-32 square nut into the buffer top hole tube as seen in Figure 4. **NOTE:** The screw in step 6 will tighten into this square nut.



**2** Select the correct adapter for your shotgun. The Mossberg and Maverick require no adapters. The Remington/Norinco and Winchester adapters are marked. Next, select the appropriate mounting bolt supplied for your shotgun as seen in Figure 2.

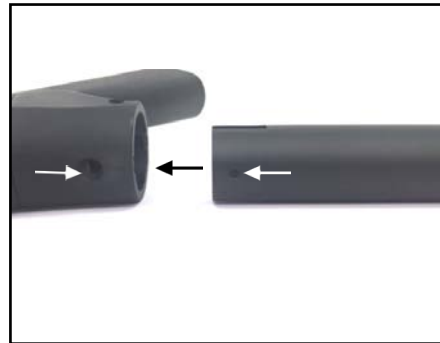

**5** Next, insert the adapter tube into the rear of the pistol grip and align the pre-drilled hole on the top of the grip with the one in the tube as seen in Figure 5.



**3** Place the pistol grip with the appropriate adapter (if necessary) onto the rear of the shotgun. Place the appropriate bolt and supplied washer through the back of the grip and adapter and using the appropriate allen wrench, secure the pistol grip to the shotgun receiver by the tightening the bolt as seen in Figure 3.



**6** Using the provided 8-32 x 3/4" Flat Head Socket Cap Screw and a 8/32 allen wrench, tighten the buffer tube to the pistol grip as seen in Figure 6.

# PRODUCT INSTALLATION GUIDE

Moss/Rem/Win 12GA Shotforce Adjustable TactLite  
Shotgun Stock with Scorpion Recoil Pad

PAGE 2




7

To install the stock begin by pressing the adjustment lever as seen in Figure 7.



8

Next, grab the adjustment lever with your thumb and index finger and pull down as seen in Figure 8.

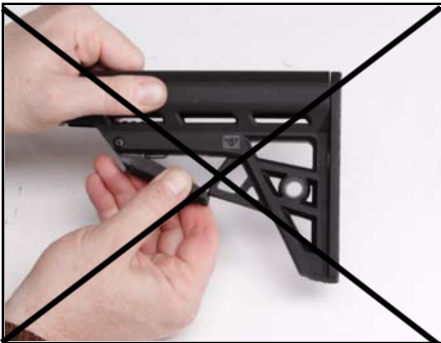

9

NOTE: DO NOT TRY TO PULL THE ADJUSTMENT LEVER FROM THE REAR AS SEEN IN FIGURE 9 AS THIS MAY CAUSE THE LEVER TO SNAP.



10

While holding the adjustment lever down as seen in Figure 2, slide the stock onto the buffer tube as seen in Figure 10 to complete your installation.