



# PRODUCT INSTALLATION GUIDE

## MRSW 12 GA Talon T3 Adjustable TactLite Shotgun Stock w/ Scorpion Recoil System



### HARDWARE INCLUDED

-  [1] 1/4 - 28 x 1 1/4" Socket Head Cap Screw
-  [1] #12 Flat Washer
- [1] M8 - 1.25 x 50 Socket Head Cap Screw
- [1] 5/16 - 18 x 1" Machine Screw
- [1] 5/16 - 18 x 1" Machine Screw
- [1] 5/16 Lock Washer
- [2] 6 x 48/2 x 1/2 Phillips Head Screw
- [1] 8-32 Square Nut
- [1] 8-32 x 1/2 Socket Head Cap Screw

### TOOLS NEEDED

-  Flat Head Screwdriver
-  Phillips Head Screwdriver
-  Allen Set



**Warning:** When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.




**1** Begin by removing the existing recoil pad from your stock using a phillips head screwdriver. Next using a long flat head screwdriver or the appropriate socket with extension remove the stock bolt from the inside of the opening in the rear of the stock as seen in Figure 1.




**4** Using the appropriate adapter for your shotgun, place into the pistol grip as seen in Figure 4 and using a phillips head screw driver install and tighten the provided 6 x 48/2 x 1/2" Plastite Phillips Flat Head screw.



**2** Slide the backstrap off of the pistol grip as seen in Figure 2.

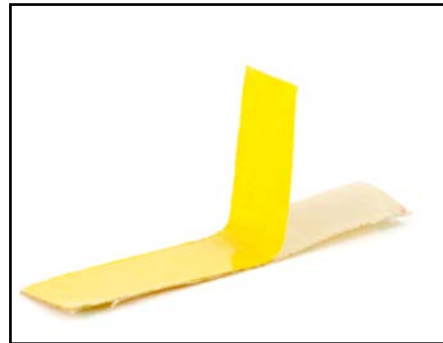

**5** To install the trigger pad begin by removing the yellow side of the adhesive strip as seen in Figure 5.

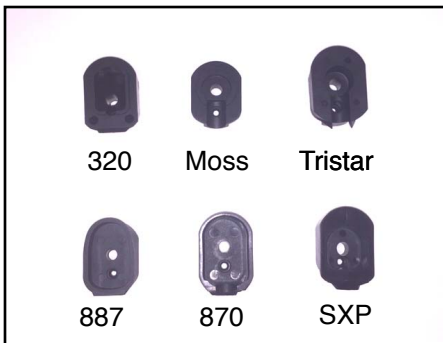

**3** Select the appropriate adapter and screw for your shotgun as seen in Figure 3. NOTE: For the 887 use the 1/4-28 x 1 1/4" screw and # 12 washer and for the 870 use the 1/4-28 x 2" screw and # 12 washer. For the Mossberg use the 5/16 - 18 x 1" screw and 5/16 lock washer and for the SXP, 320 and Tristar use the M8 - 1.25 x 50mm Socket Head Cap Screw and 5/16 lock washer.



**6** Place the adhesive strip (with the adhesive side down) onto the pistol grip and then remove the white strip by pulling up. Next attach the foam padding to the adhesive with the thicker part of the foam pad in the vertical portion of the pistol grip channel as seen in Figure 6.

# PRODUCT INSTALLATION GUIDE

MRSW 12 GA Talon T3 Adjustable TactLite Shotgun  
Stock w/ Scorpion Recoil System

PAGE 2



7

Place the pistol grip flush against the receiver and using the appropriate bolt and washer, tighten the pistol grip to the receiver with the appropriate allen wrench as seen in Figure 7.



8

Turn the tube over and install the provided 8-32 square nut into the buffer top hole tube as seen in Figure 8.

NOTE: The screw in the next step will tighten into this square nut.



9

Install the buffer tube into the rear of the pistol grip and then flip the shotgun over and using a 9/64 allen head driver and the provided 8-32 x 1/2 Socket Head Cap screw tighten the buffer tube to the pistol grip as seen in Figure 9.



10

Slide the backstrap onto the pistol grip and using a Phillips Head Screwdriver and the provided 6 x48/2 x 1/2 Plastite Phillips Head Screw tighten the backstrap as seen in Figure 10.