

PRODUCT INSTALLATION GUIDE

AK-47 Strikforce Adjustable Side Folding TactLite Stock



HARDWARE INCLUDED

[1] 8-32 x 5/8" Button Head Cap Screw

Non Applicable

TOOLS Needed


Flat Head Screwdriver

Phillips Head Screwdriver

Allen Set




Warning: When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

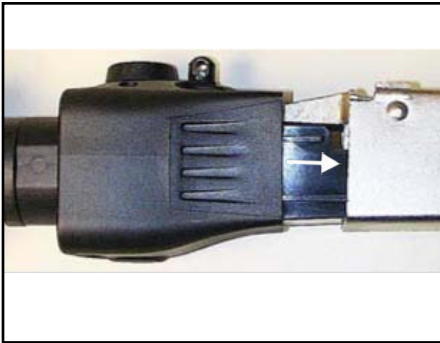

1 After disassembling your AK using your owners manual, begin by placing the pivot housing assembly into the receiver as seen in Figure 1.



4 Place the pivot housing assembly into the receiver, insert the (2) original screws and tighten both screws to secure the stock to the receiver as seen in Figure 4.

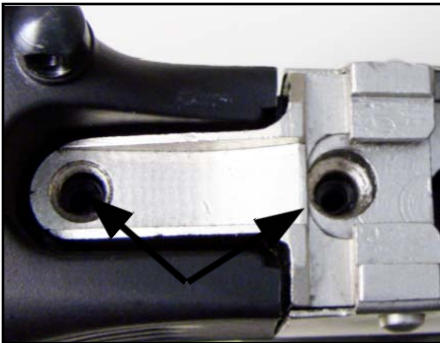

2 With the pivot housing assembly in the receiver, mark the two holes using a pen as seen in Figure 2. Measure the outside of the screw to make sure it measures .230". If the screw you are using does not have an outside diameter of .230", measure the outside diameter and use the appropriate drill bit.



5 Turn the tube over and install the provided 8-32 square nut into the top hole on the tube as seen in Figure 5.
NOTE: The screw in step 8 will tighten into this square nut.



3 If the screw measures .230 remove the pivot assembly and start by drilling pilot holes in the center of the 2 marked holes with a 1/16" starter drill bit as seen in Figure 3. Next, move up to the 3/16" drill bit and drill 2 wider holes using the two pilot holes.



6 Next, put your stock into the folded position by pressing together on the pin cap and under the pivot housing as seen in Figure 6.

PRODUCT INSTALLATION GUIDE



7

With the stock in the folded position, slide the buffer tube into the pivot housing as seen in Figure 7.

NOTE: The hole on the tube must line up with the hole on the pivot housing.



8

Using the provided 8-32 x 5/8" Button Head Cap Screw and a 3/32 allen wrench, tighten the buffer tube to the pivot housing as seen in Figure 8.