

# PRODUCT INSTALLATION GUIDE

## Shotgun Rear Pistol Grip



### HARDWARE INCLUDED

-  [1] 1/4-28 x 2" Machine Screw
- [1] 5/16 - 18 x 1 1/2" Machine Screw
- [1] 5/16 - 24 x 2 1/2" Machine Screw

-  [1] 5/16 Lock Washer
- [1] M8 Flat Washer

### TOOLS NEEDED

-  Socket Wrench
-  Phillips Head Screwdriver
-  Allen Set



**Warning:** When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. We are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.




1

Begin by removing the existing recoil pad from your stock by using a Phillips Head Screwdriver. Next use a long Flat Head Screwdriver or the appropriate socket with extension to remove the stock bolt from the inside of the opening in the rear of the stock as seen in Figure 1.



4

Secure the appropriate bolt and washer to the shotgun receiver by tightening the bolt using the proper allen wrench as seen in Figure 4.

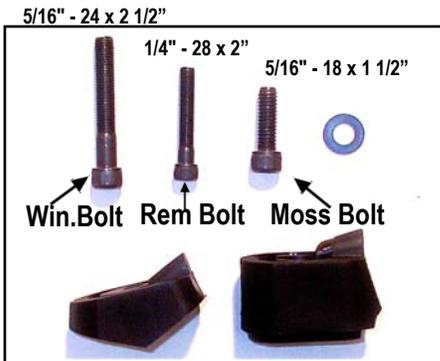

5/16" - 24 x 2 1/2"

1/4" - 28 x 2"

5/16" - 18 x 1 1/2"

Win. Bolt Rem Bolt Moss Bolt

Winchester Adapter Remington Adapter

2

Select the correct adapter for your shotgun. The Mossberg and Maverick require no adapters. The Remington/Norinco and Winchester adapters are marked. Next, select the appropriate mounting bolt supplied for your shotgun as seen in Figure 2.



5

Place the pistol grip end cover at the rear of the grip and press into place as seen in Figure 5 to complete your installation.



3

Place the appropriate bolt, with the supplied washer through the back of the grip and adapter (if used) as seen in Figure 3.

LIMITED LIFE TIME WARRANTY

MADE IN THE USA

LIMITED LIFE TIME WARRANTY

