

# PRODUCT INSTALLATION GUIDE

## Stock Shell Carrier

### HARDWARE INCLUDED

- [2] 6-32 x 7/16 Flat Head Cap Screw
- [5] 10-32 x 3/8 Low Profile Hex Cap Screw

- [5] M6 Lock Washer

### TOOLS Needed

- Allen Set




**Warning:** When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.



Using a 5/64 allen wrench, begin by removing the 2 6-32 x 1/4" low profile allen head screws from the cheekrest as seen in Figure 1.

Note: This Shell Carrier can be installed on either side of the cheekrest.

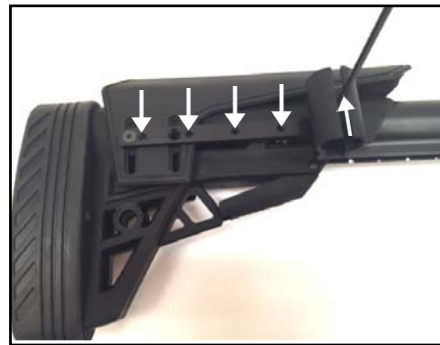


Place the shell holder onto the carrier and install the provided 10-32 x 3/8" low profile hex cap screw and M6 lock washer using a 1/8" allen wrench as seen in Figure 4.

Note: You may install up to 5 shell holders.



Take the shell carrier and place onto the cheekrest making sure that the locating tabs are positioned into the screw holes as seen in Figure 2.

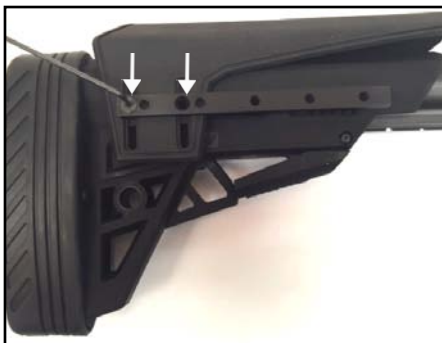

Using the provided (2) 6-32 x 7/16 flat head cap screws and a 5/64 allen wrench, tighten the shell carrier to the cheekrest as seen in Figure 3.

