

PRODUCT INSTALLATION GUIDE

Universal Cheekrest Pad



HARDWARE INCLUDED

[2] #8 X 1 1/4" Sheet Metal Screw

NON APPLICABLE

TOOLS Needed

Allen Set




Warning: When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.



1

Begin by taping the cheek rest onto the stock as seen in Figure 1 to determine the correct location of the cheek rest.

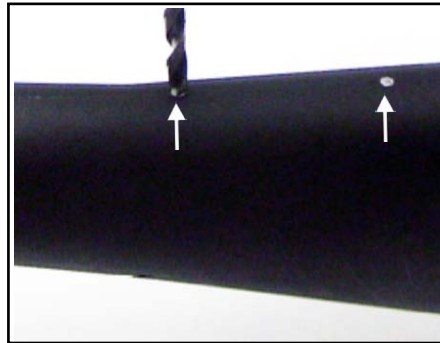


4

Drill the 2 marked holes using a 7/64" bit as seen in Figure 4.



2

Make sure that the cheek rest holes are in the centerline of the stock as seen in Figure 2.

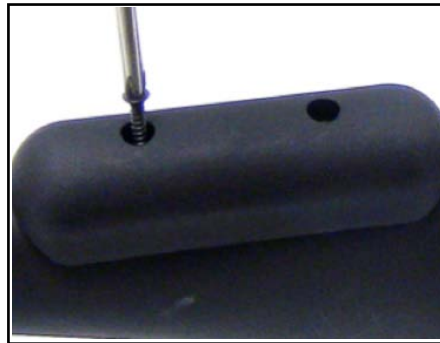

5

Install the provided (2) #8 x 1 1/4" screws as seen in Figure 5.
NOTE: The use of wide velcro strips may be used as an alternative to drilling into the stock.



3

Using a punch, nail or marker, mark the 2 holes of the cheek rest as see in Figure 3.