



T3 Rear Pistol Grip



Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

Parts List



- A. T3 Grip Sub-assembly
- B. Grip Adapters (6)
- C. T3 Grip QD Plug
- D. Foam Pad

Hardware List



- 1. Screw M8-1.25 x 50mm
- 2. Screw 1/4-28 x 2"
- 3. Screw 5/16-18 x 1-1/2"
- 4. Screw 1/4-28 x 1-1/4"
- 5. Screw 8-32 x 1/2"
- 6. Lock Washer
- 7. Washer
- 8. Plastite Screw 6-48 x 1/2"
- 9. Plastite Screw 6-48 x 1/2"

1 Remove Original Stock

Figure 1



Begin by removing the existing recoil pad from your stock using a Phillips head screwdriver. Next using a long flat head screwdriver or appropriate socket remove the stock bolt. You can now remove the old stock from the receiver as shown in (Figure 1).

4 T3 Adapter Installation



Mossberg 500/535/590/835 12ga & 20ga (proud fit)
Maverick 88 12ga & 20ga (proud fit)

Winchester SXP 12ga

2 Remove Grip Backstrap from Grip

Figure 2



Slide the backstrap off of the pistol grip as seen in (Figure 2).



Remington 870/7400 12ga

TriStar Raptor/Cobra 12ga

3 Trigger Guard Pad Installation

Figure 3a



Take the double sided Tape and remove the yellow backing as seen in (Figure 3a). Next install the stick side down onto the grip as seen in (Figure 3b). Now remove the white strip off the double sided tape and install the foam pad as seen in (Figure 3c).



Figure 3b

Figure 3c



Remington 887 12ga

Stevens 320 Pre-2016

Figure 4a



Place the appropriate adapter from above into the pistol grip as seen in (Figure 4a) (We are using the Mossberg adapter as an example.) Press the adapter into place. Now screw the adapter in place using the (#8) 6-48 x 1/2" Plastite Phillips Flat Head Screw.



T3 Rear Pistol Grip



Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

5 Grip Installation to Receiver



5a.

Screw 5a

Winchester SXP, the Stevens 320 and Tristar Raptor use the M8-1.25 x 50mm Socket Head Cap Bolt and Lock Washer



5b.

Screw 5b

Remington 870 use the 1/4-28 x 2" Socket Head Cap Bolt and Washer



5c.

Screw 5c

Mossberg 500/535/590/835 12ga & 20ga (proud fit)
Maverick 88 12ga & 20ga (proud fit) use the 5/16-18 x 1-1/2" Socket Head Cap Bolt and lock washer



5d.

Screw 5d

Remington 887 use the 1/4-28 x 1-1/4" Socket Head Cap Bolt and the Washer

Figure 5a



Figure 5b



Place the pistol grip flush against the receiver (Figure 5a) and using the appropriate bolt and washer from above, tighten the pistol grip to the receiver with the appropriate allen wrench as seen in (Figure 5b). (We are using the Mossberg adapter as an example.)

6 QD Plug Installation



Figure 6a

Figure 6b

Take the QD Plug as seen in (Figure 6a) making sure the hole on the bottom of the QD Plug is lined up with the hole in the grip and install the plug until seated into the rear of the grip as seen in (Figure 6b).

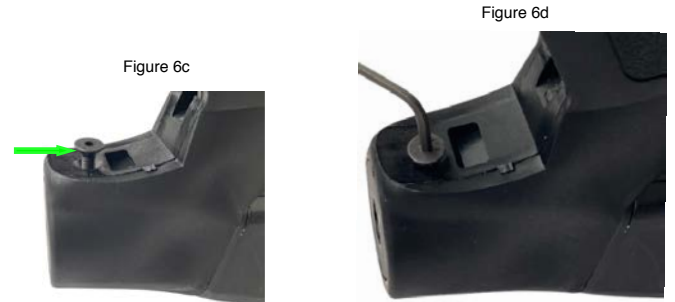


Figure 6c

Figure 6d

Using the 8-32 x 1/2" (#5) flat head cap screw as seen in (Figure 6c), tighten the QD Plug until seated as seen in (Figure 6d).

7 Backstrap Installation



Figure 7a

Figure 7b

Figure 7c

Slide the backstrap onto the pistol grip as seen in (Figure 7a) until seated as seen in (Figure 7b). Using a Phillips Head Screwdriver and the provided 6 x48 x 1/2" Plastite Phillips Head Screw (#9) screw the backstrap to the grip as seen in (Figure 7c).

**You're finished.
Now enjoy your New Grip!**

**Add additional ATI Accessories to
your Builds!**