

# PRODUCT INSTALLATION GUIDE

## AK-47 Handguards with Picatinny Rails



### HARDWARE INCLUDED


- [2] 6-32 x 3/8 Machine Screw
- [4] 6-32 x 1/2 Machine Screw
- [3] 6-32 x 5/16 Phillips Head Plastite Screw
- [1] 10-32 x 5/16 Sling Swivel Stud
- [9] 6-32 Hex Nut
- [1] 10-32 Hex Nut

### TOOLS Needed


- Phillips Head Screwdriver




**Warning:** When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. We are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

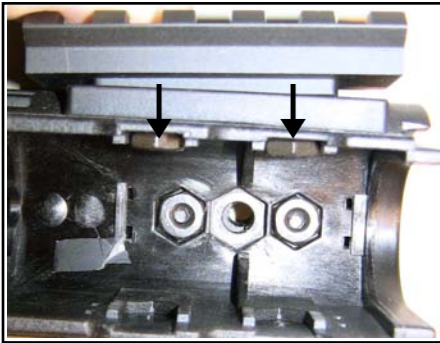


1 If you choose to install the 2" rails on the bottom and or sides of the lower handguard begin by placing the rail onto the handguard. Next place the supplied 6-32 hex nuts into the pockets on the handguard as seen in Figure 1.

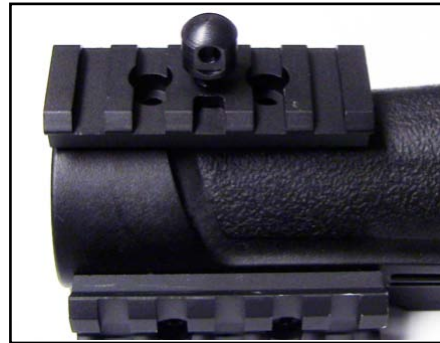


4 Tighten the swivel stud until snug as seen in Figure 4.

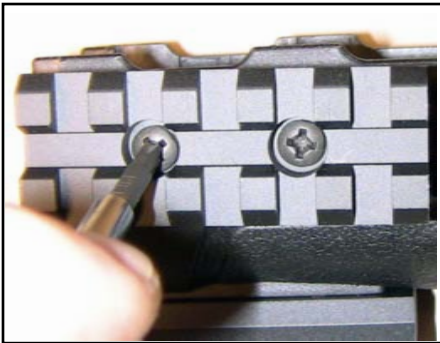


2 Using the provided 6-32 x 1/2" machine screws and a phillips head screw driver tighten the rails to the handguard as seen in Figure 2.

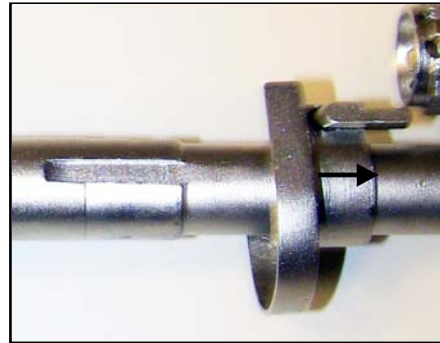

5 Unlock the front mounting bracket lever and slide the mount bracket down the barrel as seen in Figure 5.

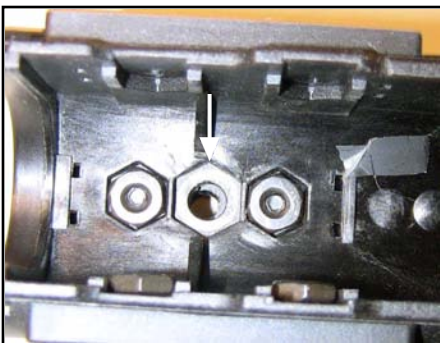


3 If desired, install the bottom swivel stud by placing the supplied 10-32 hex nut into the proper location as seen in Figure 3.

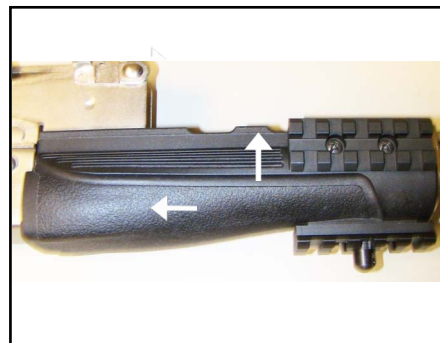


6 The lower handguard should be positioned with the ribs on the front sight housing and the end of the handguard in front of the receiver. Push up, then slide back onto the receiver as seen in Figure 6.

# PRODUCT INSTALLATION GUIDE

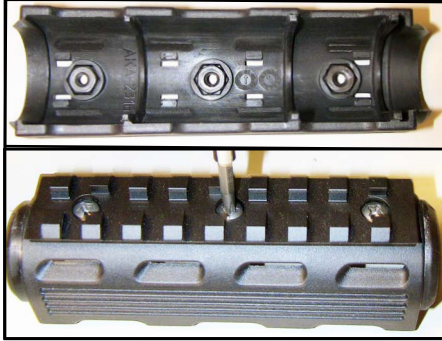


7

If you choose to install the 4" picatinny rail on the upper handguard, place the rail onto the slot then place the supplied 6-32 hex nuts in the nut pockets on the inside of the handguard. Next install the 6-32 x 5/16" supplied machine screws and tighten until snug as seen in Figure 7.

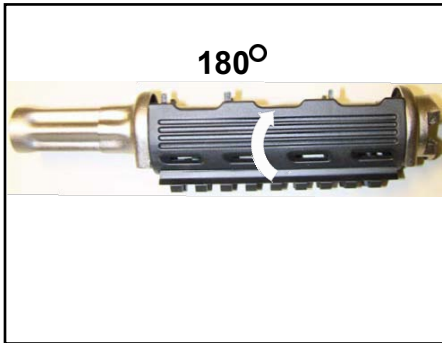

8

Install the upper handguard by pressing the handguard over the gas tube. Once on the gas tube rotate 180 degrees to place the handguard in proper position as seen in Figure 8.

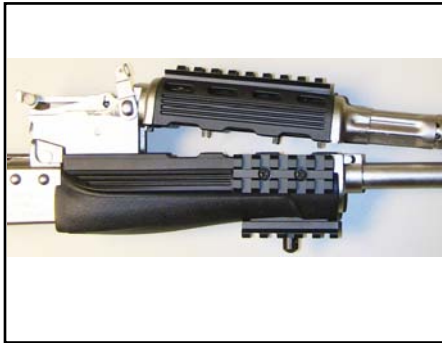

9

Install the gas tube into the gas piston. Next, align the upper handguard with the lower handguard and press the rear of the gas tube down until the lever can be locked as seen in Figure 9.