




Shotforce Pistol Grip



Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

Parts List

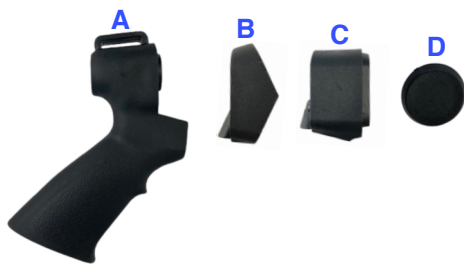

- A. Rear Pistol Grip
- B. Winchester 1200/1300 Grip Adapter
- C. Remington 870 Grip Adapter
- D. Rear Pistol Grip Plug

Hardware List



- 1. Screw 5/16-24 x 2 1/2"
- 2. Screw 1/4-28 x 2"
- 3. Screw 5/16-18 x 1 1/2"
- 4. M8 Flat Washer
- 5. 5/16 Lock Washer

1

Original Stock Removal

Figure 1

Begin by removing the existing recoil pad from your stock using a Phillips head screwdriver. Next using a long flat head screwdriver or appropriate socket remove the stock bolt. You can now remove the old stock from the receiver as shown in (Figure 1).



2

Adapter Installation



Winchester 1200/1300 12ga



Remington 870 12GA

Figure 2a



Figure 2b



Remington 870 12GA example

Place the appropriate adapter from above into the pistol grip as seen in (Figure 2a). (For example purposes, we are using the Remington adapter). Press the adapter into place as seen in (Figure 2b). Note: The Mossberg requires no adapter and will seat directly to the receiver.

3

Rear Grip to Receiver Installation



Figure 3a



Figure 3b



Figure 3c



Place the pistol grip flush against the receiver as seen in (Figure 3a) and using the appropriate bolt and washer from above, tighten the pistol grip to the receiver with the appropriate allen wrench as seen in (Figure 3b) until snug as seen in (Figure 3c).



Shotforce Pistol Grip



Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

4 Rear Grip End Cap Installation

Figure 4a



Figure 4b



Take the rear pistol grip end cap (d) as seen in (Figure 4a) and seat into the rear of the pistol grip until flush as seen in (Figure 4b).

**You're finished.
Now enjoy your New Product!**

**Add additional ATI Accessories to
your Builds!**

▶ **Limited Life Time Warranty**

▶ **www.ATIoutdoors.com**

▶ **Made in the USA**