




## AK-47 Strikeforce Gen 2 TacLite Adjustable Stock w/Elite Mount



### Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

## Parts List

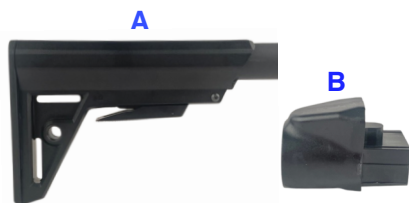

- A. Stock Sub Assembly  
B. Elite Mount

## Hardware List



1. Screw 8-32 x 5/8"  
2. Screw 8x48-2 x 1/2"  
3. Nut 8-32


## 1 Elite Mount Installation

Figure 1a




After disassembling your AK using your owners manual, begin by placing the elite mount as seen in (Figure 1a) until seated against the receiver.

Figure 1b

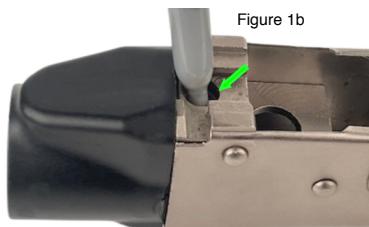

Using a paint pen, mark a circle onto the mount by placing the pen through the existing hole in the receiver as seen in (Figure 1b). Make sure the mount is held tight and flush to the receiver when making your mark.

Figure 1c

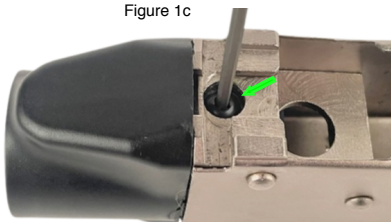

Before proceeding make sure you remove the mount from the receiver. Using a 5/32" drill bit, drill through the marked hole about 1/2". Place the mount into the receiver and using the provided 8x48-2 x 1/2" torx screw (#2), tighten using the appropriate torx driver to the receiver as seen in (Figure 1c).

## 2 Stock Tube to Elite Mount Installation

Figure 2a




Figure 2b



Take the buffer tube and install the 8-32 square nut (#3) into the buffer tube bottom slot as seen in (Figure 2a).

Next press the square nut until you can see it centered in the buffer tube as shown in (Figure 2b).

Figure 2c

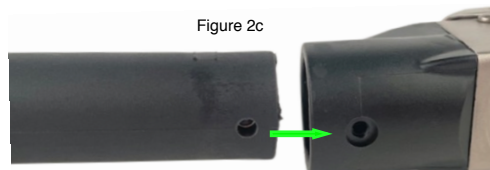


Install the buffer tube into the rear of the mount as seen in (Figure 2c) making sure the hole in the tube and mount line up.

Figure 2d



Figure 2e

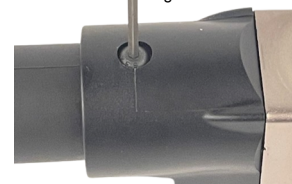

Turn the firearm over and using the provided 8-32 x 5/8" button head cap screw (#1) insert into the bottom hole of the elite mount as seen in (Figure 2d). Using a 3/32 allen wrench tighten the screw until seated as seen in (Figure 2e).

**You're finished.  
Now enjoy your New Product!**

**Add additional ATI Accessories  
to your Builds!**