




# Hi-Point 9mm Carbine Stock



## Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

## Parts List

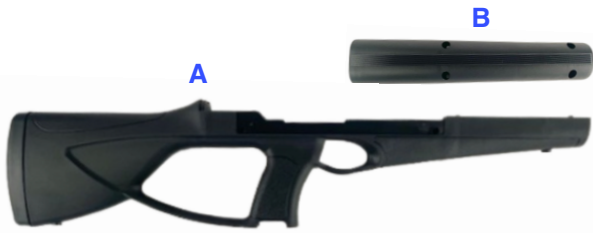

A. Hi-Point Stock Body

B. Top Cover

## Hardware List



1. Receiver Cover

2. Front Cover Plate

3. Mag Release Cover

4. Barrel Clamp

5. Mag Release Housing

6. Mag Release Button


7. Screw-6x48/2 x 1/2 (6)

8. Screw-6x48/2 x 1/2 (1)


9. Screw-6x48/2 x 1/4(1)

10. Sling Stud 3/8 (2)

## 1 Sling Stud Installation

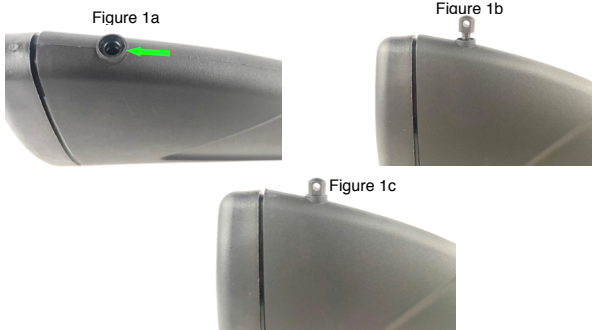


To install the sling stud in the bottom of the buttstock as seen in (Figure 1a), take the sling stud (#1) and place into the buttstock as seen in (Figure 1b). Tighten the sling stud using a crescent wrench until snug as seen in (Figure 1c).

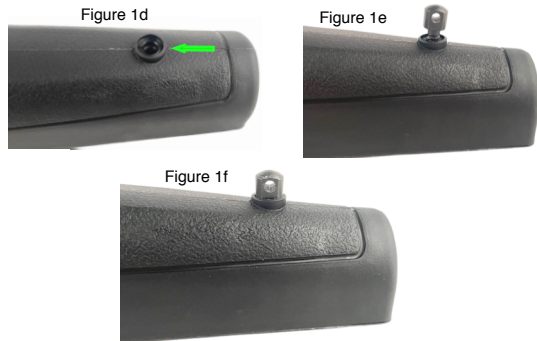


To install the sling stud in the bottom of the forend as seen in (Figure 1d), take the sling stud (#1) and place into the forend as seen in (Figure 1e). Tighten the sling stud using a crescent wrench until snug as seen in (Figure 1f).

## 2 Mag Release Installation

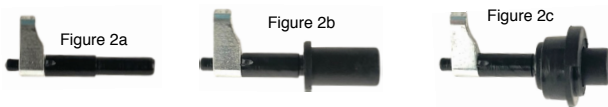


After disassembling the original stock, begin by assembling the new mag release. Take the release pin as seen in (Figure 2a) and slide the new release button(#6) onto the release pin as seen in (Figure 2b). Next, slide the release housing(#5) over the release button as seen in (Figure 2b).

## 2 Mag Release Installation Continued

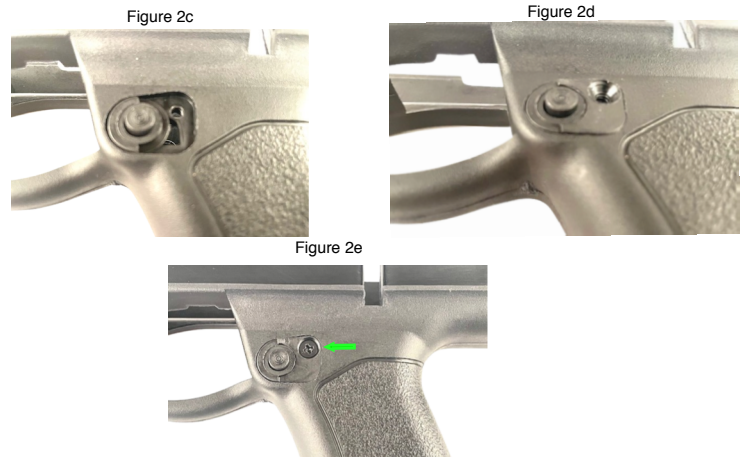

Push the mag release housing and pin until the housing bottoms out on the surface of the stock as seen in (Figure 2c). Install the release cover(#3) as seen in (Figure 2d) and using the 6x48/2 x 1/4" screw (#9) and a phillips head screw driver, tighten as seen in (Figure 2e).

## 3 Barreled Action Installation

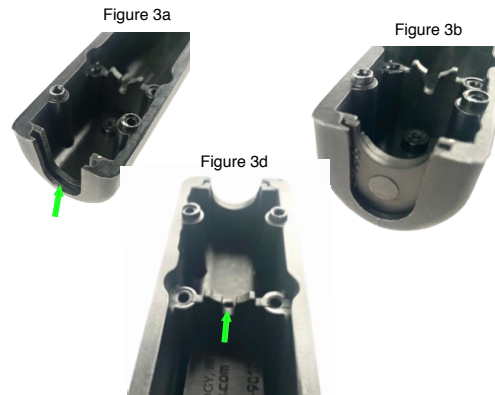

Begin by sliding the front cover plate(#2) into the slot in the front of the forend as seen in (Figure 3a) until fully seated as seen in (Figure 3b). Note: For newer models of the 995, you may need to remove the first rib in the forend as seen in (Figure 3c) to allow the small barrel band and top cover to be fully installed into the stock.



# Hi-Point 9mm Carbine Stock



### Warning:

When handling a firearm, always follow the proper handling procedures at all times. Failure to follow these procedures could result in serious damage, injury, or death. WE are not responsible for damage to property, injury, or death resulting from improper installation, misuse or modification of products. If you are not comfortable completing any of the following steps, or do not have the proper tools enlist the help of your local gunsmith. We are not responsible for components that are damaged due to improper installation.

## 3 Barreled Action Installation Continued

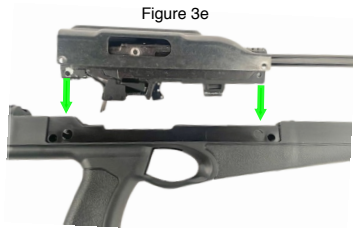


Figure 3e

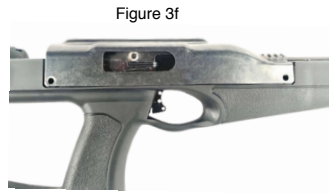


Figure 3f

Install the barreled action making sure the holes in the metal receiver cover line up with holes in the stock body as seen in (Figure 3e) until seated as fully seated as seen in (Figure 3f).

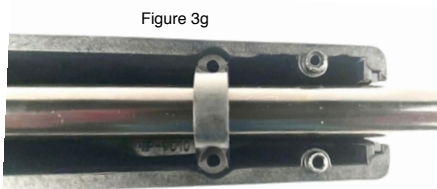


Figure 3g

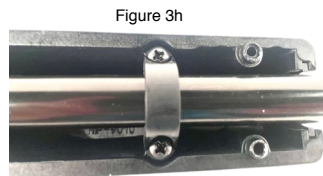


Figure 3h

Next, install the barrel clamp (#4) over the barrel as seen in (Figure 3g). Using the provided #6x48/2 x 1/2" phillips head screw (# 8) and a phillips head screw driver tighten the barrel clamp until snug as seen in (Figure 3h).

## 4 Receiver Cover Installation

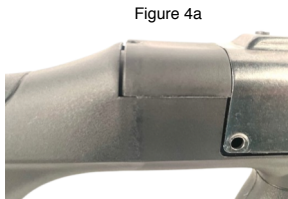


Figure 4a

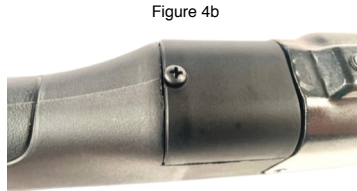


Figure 4b

Take the receiver cover (#1) and install behind the receiver as seen in (Figure 4a). Using the provided 6x48/2 x 1/2" phillips head screw (9) and a phillips head screw driver, tighten the receiver cover as seen in (Figure 4b).

## 5 Top Cover Installation

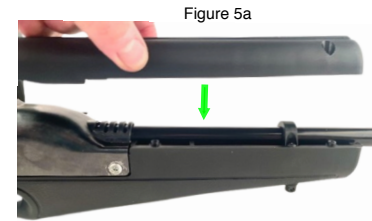


Figure 5a

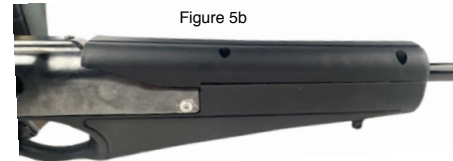


Figure 5b



Figure 5c

Take the top cover (B) as seen in (Figure 5a) and place over the barrel unit it is lined up with the bottom of the stock body as seen in (Figure 5b). Using (4) #6x48/2 x 1/2" phillips head screws (#8) and a phillips head screw driver, tighten the top cover to the stock body as seen in (Figure 5c).

## 6 Receiver Clip Installation

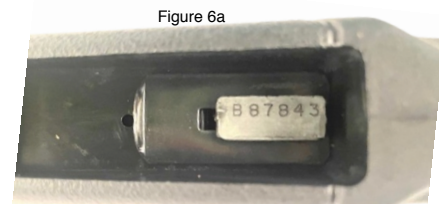


Figure 6a

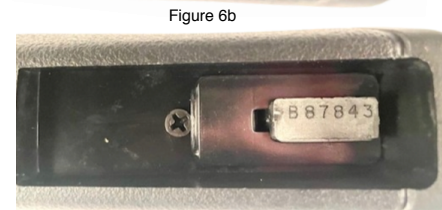


Figure 6b

Turn the rifle over and the hold down receiver clip from the original stock. Place the receiver clip into the receiver lug opening with the tang up as seen in (Figure 6a). Using the the provided #6 x 1/2" phillips head screw (#8) and a phillips head screw driver tighten as seen in (Figure 6b). You can now install the original receiver cover screws to hold the receiver to the stock to complete your stock installation.

**You're finished.  
Now enjoy your New Stock!**

**Add additional ATI Accessories to  
your Builds!**